CBR400RR-NC23-K Resistor Mod Instructions

2K resistor loop for Speedo plug

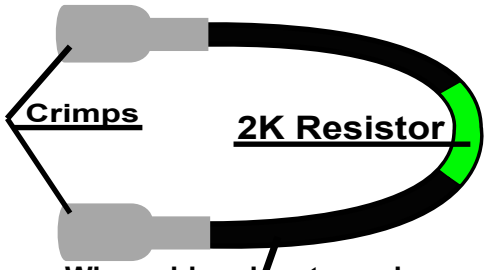

Wire soldered on to each leg/end of the resistor then covered in heatshrink for extra protection

2K resistor loop for CDI/ECU

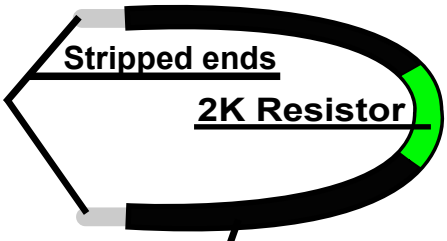

Wire soldered on to each leg/end of the resistor then covered in heatshrink for extra protection

You will need:
2K Metal Film Resistor
2" long x 3mm Heatshrink
2 crimps unshielded
crimp tool
Soldering iron
solder
flux
sharp blade
cutter pliers
Patience!

NC23-K Speedo Plug end

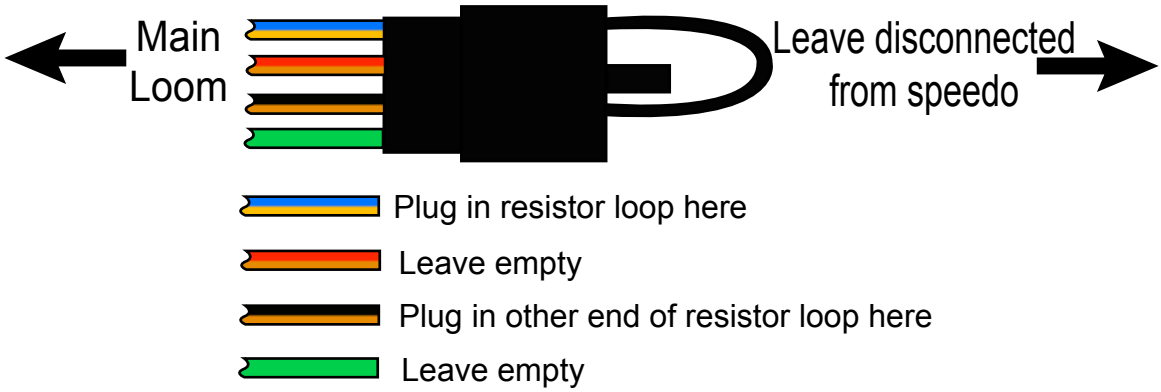

NC23-K Resistor mod at CDI/ECU

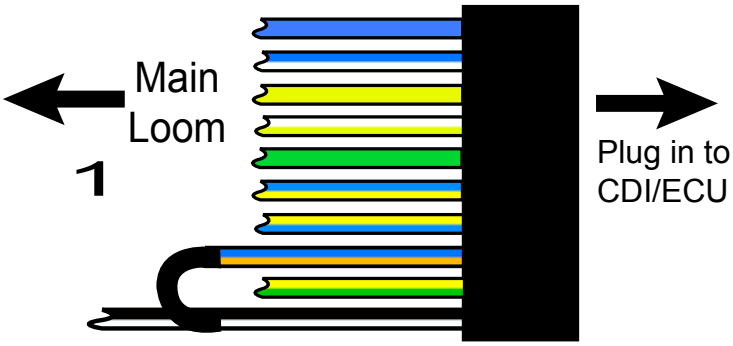

1. Ideal for track day/racing bikes
◊Cut & strip (5mm) Blue/Orange wire
◊Solder one end of resistor on Blue/Orange wire
◊CAREFULLY cut a 5mm section out of Black/White wire
◊Solder other end of resistor on to Black/White wire section

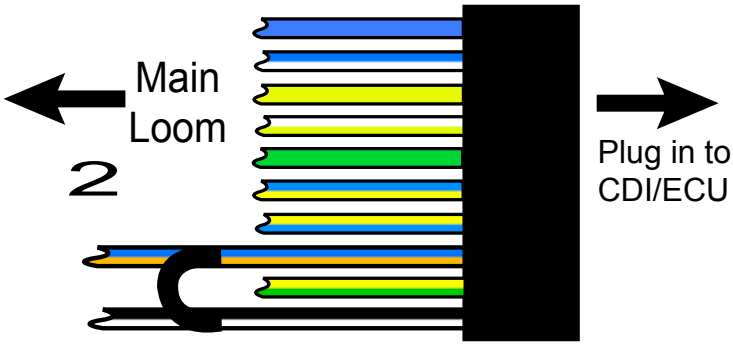

2. Ideal for road bikes
◊CAREFULLY cut a 5mm section out of Blue/Orange wire
◊Solder one end of resistor in to Blue/Orange wire section
◊CAREFULLY cut a 5mm section out of Black/White wire
◊Solder other end of resistor in to Black/White wire section
◊Unplug connector from speedo